



ERP Driver Configuration Tool Programming Software Release Notes

Version 1.1.0 (02 July 2018)

1. Added NTC parameters into all the files including configuration list.
2. Added .csv log file fixes, which correct for the ERP data folder being deleted.
3. Moved import/export configuration buttons to right side.
4. Merged GUI between [PSB Series](#) and [PDB Series](#).

Version 1.1.1 (12 August 2018)

1. Fixed bug where TRIAC transfer function (PHB Series only), was being configured with the same value as 0-10V transfer function.

Version 2.0.3 (01 October 2018)

1. GUI automatically performs read verification of driver, upon connection. If out of range or corrupted values are discovered, range of values are automatically corrected by the GUI.
2. Advanced TRIAC functionality for PHB Series drivers.
3. Added label printing functionality.
4. 0-10V and TRIAC Min Out are all handled in % instead of mV.
5. Fixed lot programming button which programs 1 driver.
6. Added graph for NTC functionality.
7. Added 0-10V and TRIAC function description to sidebar.
8. Open circuit voltage and minimum voltage no longer displayed based on user feedback.